

# FC-04 series temperature control meter instruction manual

The meter has international standard External dimension and 3-key gentle push-switch setting, single row, 3-LED display, and ON/OFF adjustment, high control precision, temperature error can correct.

## I Main technical specification

- |                                   |   |
|-----------------------------------|---|
| 1. Input type:                    | K(0~999°C), J (0~999°C)   |
| 2. Accuracy:                      | ±0.5FS  |
| 3. Relay output contact capacity: | 240VAC 3A /30VDC 1A(resistance load)  |
| 4. External dimension (mm):       | 76 x 34 x 72  |
| 5. Hole size (mm):                | 71 x 29   |
| 6. Working power:                 | 110~242VAC, 50/60 Hz power is less than 3W  |
| 7. Work environment:              | temperature 0~50.0°C, relative humidity ≤ 85%RH, without corrode and strong electric radiation. |

## II Parameter code

Series	Attention	Name	Setting range	Remark	Factory	
-	0	<i>SP</i>	Appointed data	0~999	Pres ▲ or key ▼ 3s can revised appointed data	100
1		<i>Loc</i>	Electronics lock	0~50	When <i>Loc</i> = 0, only the setting value can be revised; When <i>Loc</i> = 18, all parametars can be revised	18
2		<i>SC</i>	Measurement deviation	±20.0	Measuring value can be modified through increasing or decreasing this data	0
3		<i>HY</i>	control by drop in level	0,1~50,0	-	0.5
4		<i>CoL</i>	System function choice	0~1	0 : reverse control (heating control) 1: positive control (cooling control)	0
5		<i>SPL</i>	Range lover limit	origin ~ <i>SPH</i>	-	-
6		<i>SPH</i>	Range uper limit	<i>SPL</i> ~ full range	-	-
7		<i>Sn</i>	Input siganl	0~1	0 : K, 1 : J	1

## III Operate method:

1. Fixed value setting:

Press ▲ or ▼ key 3 second, fixed value and "*SP*" display by turns, press ▲ or ▼ key to adjust, press SET key save it and exit.after 10 second later, you not press any key autosave and exit.

2. parameter setting :

Press SET key 3 second, enter into parameter setting state,the parameter code and parameter value display by turns, press ▲ or ▼ key to adjust, press SET key save it and exit.after 10 second later, you not press any key autosave and exit.